 
FIRE PIT ASSEMBLY MANUAL



Spart Parts



WARNINGS - CAUTION!

- This product is intended FOR OUTDOOR USE ONLY. DO NOT use indoors.
- WARNING: ALWAYS keep children and pets away from the product when in use.
- NEVER leave a burning fire unattended.
- DANGER of carbon monoxide poisoning NEVER light this product or let it smolder or cool down in confined spaces.
- DO NOT use this product in a tent, caravan, car, cellar, loft or on a boat.
- DO NOT use under any awnings, parasols or gazebos.
- FIRE HAZARD Hot embers may emit while in use.
- WARNING: DO NOT use petrol, white spirit, lighter fluid, alcohol or other similar chemicals for lighting or relighting.
- This product is ONLY suitable for use with untreated wood, logs and charcoal.
- DO NOT use coal in this product.
- DO NOT use this product on decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark.
- Ensure that the product is positioned at least 3m away from flammable items.

 Also ensure that there is a minimum overhead clearance of 3m from the top of the unit.
- DO NOT use this product as a furnace ONLY use as a patio heater.
- ATTENTION: This product will become very hot, DO NOT move it during operation.

CARE & USE

- Enst the product is positioned on a permanent flat, secure, heat resistant, non-flammable surface away from flammable items.
- Ensure that the product has a minimum of 3m overhead clearance and has a minimum of 3m clearance from other surrounding items.
- Decide on the location as above.
- The unit may be left outside all year if a cover is used to help protect it from bad weather.
- As this model is made from steel, the surface will age and develop surface rust as soon as it is placed outside and from first use. This is to be expected, does not affect use and is not a product fault. Please see below instructions on how to refresh the paint finish if desired.
- To help reduce surface rust, rub the product with an oily rag after each use.
- For safety reasons, always inspect your product prior to use for signs of fatigue and damage, and replace your model as and when necessary. Continuing to use a damaged unit could cause personal injury or damage to property.
- ALWAYS use heat resistant gloves during use and when adding fuel.
- Never use the fire basket for burning waste or anyother unsuitable or unrecommended fuels including liquid fuels.
- Attention! Always comply with national and localregulations regarding permits, operation, safety distances and the like!
- Attention! Do not use spirit or petrol for igniting or reigniting!

LIGHTING & REFUELLING

- This product is **ONLY** suitable for use ready-for-use soft or hard wood (no pellets made of this wood).
- Prepare a stack of loosely crumpled newspaper and place on top of the fuel grate.
- Pile finely split dry firewood or kindling on top of the paper.
- To light the newspaper, use long safety matches or a long nosed lighter.
- Once sufficiently alight, add logs or larger pieces of untreated wood to the unit to increase the heat slowly.
- **DO NOT** overload with fuel, only one or two logs is sufficient.
- ALWAYS use heat resistant gloves when adding fuel and replacing the mesh cover, as the unit will become
 very hot.

EXTINGUISHING

 To extinguish, stop adding fuel and allow fire to die or douse with sand. DO NOT use water as this may damage the product.

STORAGE

When not in use, and if stored outside, cover the product once it has cooled completely with a cover.

AFTER SALES SERVICES

• We hope you will be satisfied both our product and services. If not, please give our helpful customer service team an opportunity to improve your experiences. Our team members are please to help you until problem solved.